

## FIAT OBDII DTC

P1001	CAN line
P1003	Ext. influence on quantity
P1101	Barometer pressure
P1101	Pressure loss in the boost circuit
P1105	Altitude sensor
P1106	Boost pressure sensor
P1107	Spirl solenoid
P1108	Electric fan - assembly 1
P1109	Electric fan - assembly 2
P1110	A/C control break off
P1110	Signal disconnection A/C
P1112	Control fuel pressure
P1118	Diesel pressure control
P1121	Throttle position potentiometer 1 [signal implausible]
P1121	Throttle potentiometer track 1
P1122	Throttle position sensor [signal implausible]
P1122	Throttle potentiometer track 2
P1132	Fuel rail pressure
P1132	Sensor of catalyst temperature
P1133	Lambda 1 signal above catal.(deviated)
P1133	Oxygen sensor B1-S1
P1135	In position 3 piston
P1135	Oxygen sensor B1-S2
P1135	Preheating resistance 1 above catal.
P1138	Diesel pressure circuit
P1141	Worheiwid. 1 below
P1153	Lambda 2 signal above catal.(deviated)
P1155	Preheating resistance 2 above catal.
P1169	Voltage condition 1
P1170	Mixture ratio [Minimum lean fuel]
P1170	Voltage condition 2
P1171	Self adaptive parameter DTV
P1171	Test break off, cylinder regulating
P1171	Test interruption Testing One
P1172	Mixture 1 stength (multiplicative)
P1172	Self adaptive parameter TRA
P1173	Mixture 1 stength (additive)
P1173	Ratio mixture 1
P1173	Self adaptive parameter FRA
P1175	Mixture 2 stength (multiplicative)
P1176	Mixture 2 stength (additive)
P1177	Mixture 1 stength (multiplicative)

P1178	Mixture 2 strength (multiplicative)
P1220	Throttle position [signal implausible]
P1221	Accelerator potentiometer track 1
P1221	Line driven potentiometer 1 [signal implausible]
P1222	Accelerator potentiometer track 2
P1222	Line driven potentiometer 2 [signal implausible]
P1226	Accelerator pedal movement
P1300	Relais pre/after heating
P1300	Tonrad [run] takeover
P1300	Tooth wheel [Accomplish]
P1301	Classification injector
P1314	Vertical acc.
P1320	Synchronise Pulse/RPM
P1320	Timing/revs synchronisation
P1325	Circuit detonation value
P1325	Detonate sensor [signal implausible]
P1325	Knock measuring circuit
P1325	Knock test regulating circuit [open or short to earth]
P1326	Knock control
P1336	Torque control(request)
P1337	Torque control(comparison)
P1402	Flap
P1402	Ventol EGR throttle valve
P1403	Additional heating
P1403	Auxiliary heater
P1404	Circuit TL4226
P1408	Coolant heating circuit
P1408	Heater from heat circuit
P1421	Catalytic converter 1 temperature
P1425	Catalytic converter 2 temperature
P1429	Pressure sensor discharging
P1435	Additive addition system
P1446	Additive
P1448	Particle filter (FAP)
P1451	Intake air heater control
P1458	Water valve
P1481	Fan control
P1504	Input key
P1511	Battery voltage below sensing
P1511	Battery voltage low
P1511	Idle speed regulation potentiometer
P1512	Driver minute block
P1513	Idle speed regulator
P1514	MIL [signal implausible]

P1519	Cooler control unit
P1521	Contact voltage supply
P1529	Clutch switch
P1531	A/C compressor relay
P1531	Climate control [open circuit]
P1536	ESP system
P1555	Brake/Accelerate signal implausible
P1565	Cruise control level line
P1565	Lever cruise control Line
P1601	Cruise control switch off
P1602	A/D converter
P1602	Battery voltage
P1602	Voltage circuit
P1602	Voltage regulator
P1603	Control Unit Power Supply
P1604	Main relay
P1606	Diagnostic lamp
P1606	MIL
P1608	Coolant temperature warning lamp
P1608	Engine coolant temperature indicator
P1612	Fuel filter heater relay
P1613	Fuel contain water
P1613	Remote coding
P1614	Battery voltage sensor
P1614	Supply voltage sensor
P1620	Error in ECU gas [Error]
P1653	Camshaft position (phase) regulation
P1653	Phase variator
P1654	Control module malfunction
P1654	Modular manifold
P1655	Control module malfunction
P1664	Repeat throttle angle [over max. value]
P1671	Diesel pressure regulation
P1671	Fuel rail pressure regulator
P1672	Control module memory
P1673	Voltage condition 1
P1674	Voltage condition 2
P1680	Motorised throttle(spring)
P1681	Motorised throttle(spring)
P1682	Motorised throttle
P1683	Motorised throttle(recovery)
P1684	Motorised throttle(plausibility)
P1685	Motorised throttle(without learn)
P1686	Motorised throttle(1st idle learn)

P1686	TP adjustment self adaptive [signal implausible]
P1687	Motorised throttle(stop learn)
P1687	Throttle driven [signal implausible]
P1688	Motorised throttle(2nd idle learn)
P1689	Motorised throttle(self-compensation)
P1690	Safety cut-off
P1691	Secure breakdown
P1702	Connector lamp from A/T
P1703	Engine shut-down from aut. gearbox
P1703	Manual position switch
P1704	Auto transmission
P1704	Secondary pressure sensor
P1705	Auto transmission RPM Regulation
P1705	Connection with ABS
P1705	Control revs A/T
P1705	Reg. revs A/T
P1706	Throttle signal
P1707	Pulley check
P1708	Secondary pressure check
P1709	Chutch check
P1710	Brake Switch
P1711	Key lock solenoid
P1712	Lever Release solenoid
P1713	Neutral Signal to engine ECU
P1722	Idle Increase Signal to Engine ECU